


Air Disinfection Biosecurity vs. *Salmonella enteritidis*

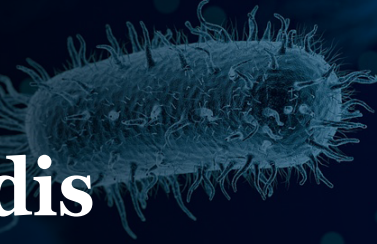

SURFACE TESTS

On PLASTIC

99.99% Log Reduction in 30 minutes;
non-detectable in one hour

Time (hours)	CFU	Log	SD	Reduction
0	79,432,800	7.90	0.2	-
0.5	400	2.6	0.2	5.30
1	0	0	0.0	7.90
2	0	0	0.0	7.90
4	0	0	0.0	7.90
6	0	0	0.0	7.90

On STAINLESS STEEL

99.99% Log Reduction in 30 minutes;
non-detectable in one hour

Time (hours)	CFU	Log	SD	Reduction
0	79,432,800	7.90	0.2	-
0.5	5,500	2.74	0.2	5.20
1	0	0	0.0	7.90
2	0	0	0.0	7.90
4	0	0	0.0	7.90
6	0	0	0.0	7.90

On FLOOR TILE

99.99% Log Reduction in 30 minutes;
non-detectable in one hour

Time (hours)	CFU	Log	SD	Reduction
0	79,432,800	7.90	0.2	-
0.5	500	2.7	0.2	5.21
1	0	0	0.0	7.90
2	0	0	0.0	7.90
4	0	0	0.0	7.90
6	0	0	0.0	7.90

Lab testing conducted by:
Scientific Air Solutions
www.scientificairsolutions.com
Turlock, CA

Note: The implementation of ADB is not intended to take the place of reasonable pathogen transmission safety precautions. Please understand and comply with local, state, and federal guidelines and public health laws, and be aware of official guidance published by the Centers for Disease Control and Prevention (CDC), including but not limited to social distancing, hand hygiene, cough etiquette, and the use of face masks.

