



Project: \_\_\_\_\_  
 Location: \_\_\_\_\_  
 Cat. #: \_\_\_\_\_  
 Type: \_\_\_\_\_  
 Quantity: \_\_\_\_\_

Powered by  Biotechnology

## ADB 7000-W | Wall-Mounted Air Disinfection Biosecurity Unit

### Features:

- 24/7 365 continuous and proactive air and surface disinfection in a compact wall-mounted unit
- Provides a comprehensive disinfection solution for use in public spaces to achieve a new air quality safety threshold by neutralizing up to 99.99% of viruses (influenza, norovirus, etc.) within minutes and bacteria (listeria, salmonella, E. coli, campylobacter, etc.) within 2 hours.
- No toxic chemicals or irradiation
- Low power consumption
- Easy plug & play operation
- Used for over 20 years and is installed in thousands of locations, worldwide

### Details:

- ADB systems activate ambient air using proprietary Modulated Dielectric Barrier Discharge that generates a safe, chemical-free non-thermal (cold) plasma. Highly reactive molecules from the plasma are distributed throughout the space via integrated turbine to neutralize microbes (viruses, bacteria & mold) and VOCs in the air and on surfaces. This sanitizing cold plasma treatment is continuous, controlled, and consistent.
- Each system is process engineered for the area being treated to ensure continuous and proper treatment levels throughout the space.

### Applications:

Suitable for most indoor conditioned spaces. Not suitable for industrial environments.

- Government Buildings
- Hospitality
- Healthcare
- Fitness/Locker Rooms
- K12/Higher Education
- Offices
- Meeting Room/Break Rooms
- Restaurants
- Retail


### Certifications:

- Certified Halal by Islamic Services of America



### Construction:

- Cabinet constructed of powder coated aluminum
- 1' Cord with 120V plug standard; 230V optional, specify plug type
- IP55 air filter

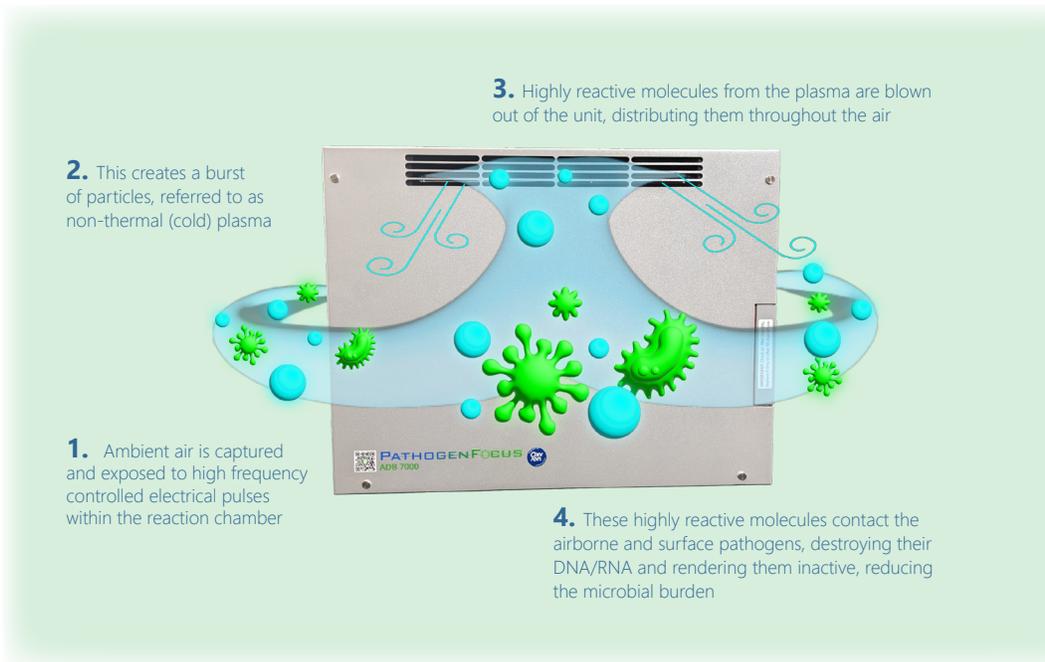

## Ordering Guide:

Series	-	Model	Voltage / Plug	Controls	-	Performance Capacity *
ADB 7000	-	1W			-	
<b>ADB 7000</b>		<b>1W</b>	<b>Blank</b> 120V, Type B Plug  <b>230Vx</b> 230V, 'x' = specify plug type	<b>Blank</b> None  <b>X</b> 2.4 GHz Zigbee Module (for use with WCS controller)  <b>XLR</b> 900 MHz Long Range Zigbee Module (for use with WCSLR controller)		<b>S1</b> <sup>(1)</sup> Selectable output - For treated volume 600 to 3,000 ft <sup>3</sup> <b>S2</b> <sup>(1,2)</sup> Selectable output - For treated volume 3,000 to 15,000 ft <sup>3</sup> <b>1L</b> Fixed output - For treated volume 720 to 850 ft <sup>3</sup> <b>1H</b> Fixed output - For treated volume 850 to 1,000 ft <sup>3</sup> <b>2L</b> Fixed output - For treated volume 1,000 to 1,250 ft <sup>3</sup> <b>2H</b> Fixed output - For treated volume 1,250 to 1,500 ft <sup>3</sup> <b>3L</b> Fixed output - For treated volume 1,500 to 1,600 ft <sup>3</sup> <b>3H</b> Fixed output - For treated volume 1,600 to 1,800 ft <sup>3</sup> <b>4L</b> Fixed output - For treated volume 1,800 to 2,500 ft <sup>3</sup> <b>4H</b> Fixed output - For treated volume 2,500 to 3,400 ft <sup>3</sup> <b>5L</b> Fixed output - For treated volume 3,400 to 4,850 ft <sup>3</sup> <b>5H</b> Fixed output - For treated volume 4,850 to 6,500 ft <sup>3</sup> <b>6L</b> Fixed output - For treated volume 6,500 to 8,000 ft <sup>3</sup> <b>6H</b> Fixed output - For treated volume 8,000 to 9,200 ft <sup>3</sup>

## Notes

<sup>(1)</sup> S1 and S2 options each have three selectable outputs controlled via a switch on the side of the unit. See table below for more info.

<sup>(2)</sup> 15,000 ft<sup>3</sup> setting requires supplemental air circulation to evenly distribute treatment throughout the space.

## Performance Capacity \* - S1 and S2 Output Options:

Switch Setting	ADB 7000-1W S1	ADB 7000-1W S2
A	600 to 1,000 ft <sup>3</sup>	3,000 to 5,000 ft <sup>3</sup>
B	1,000 to 1,750 ft <sup>3</sup>	5,000 to 8,750 ft <sup>3</sup>
C	1,750 to 3,000 ft <sup>3</sup>	8,750 to 15,000 ft <sup>3</sup> <sup>(2)</sup>

\* Performance capacity is just a guideline. ADB system design is application specific and depends on many factors, including existing bio load of the environment as well as what you are trying to achieve (improved air quality, odor elimination, food safety, increased shelf life of perishables, increased crop yield, etc.). Specific industrial processes (i.e. food processing or food safety, indoor farming) and/or certain air/surface quality issues may require up to 5 times the treatment concentration to achieve desired results. Please contact your PathogenFocus representative for proper ADB system design.

## Accessories:

**WCS** Localized 2.4 GHz Wireless Control System with touch screen interface. 120V.  
(1) WCS can control up to (20) ADB 7000 units, depending on range.

**WCS LR** Localized 900 MHz Long Range Wireless Control System with touch screen interface. 120V.  
(1) WCSLR can control up to (20) ADB 7000 units, depending on range.

**WCS 230Vx** Localized 2.4 GHz Wireless Control System with touch screen interface. 230V, specify plug type.  
(1) WCS can control up to (20) ADB 7000 units, depending on range.

**WCS LR 230Vx** Localized 900 MHz Long Range Wireless Control System with touch screen interface. 230V, specify plug type.  
(1) WCSLR can control up to (20) ADB 7000 units, depending on range.

**D215R-1BW** Leviton Decora Smart Outlet, 15A, 120V, WiFi


**D215P-1BW** Leviton Decora Smart Plug, 15A, 120V, Indoor, WiFi



**Specifications:**

Model	Operation Frequency	Amps	Max Power	Voltage	Length	Width	Hight	Weight	Turbine CFM
ADB 7000-1W	50/60 Hz	0.1A	12W	120V	18.82"	5.56"	14.39"	11 lbs.	112.9
ADB 7000-1W 230V	50/60 Hz	0.057A	13W	230V	18.82"	5.56"	14.39"	12.5 lbs.	112.9

**Schematic:**

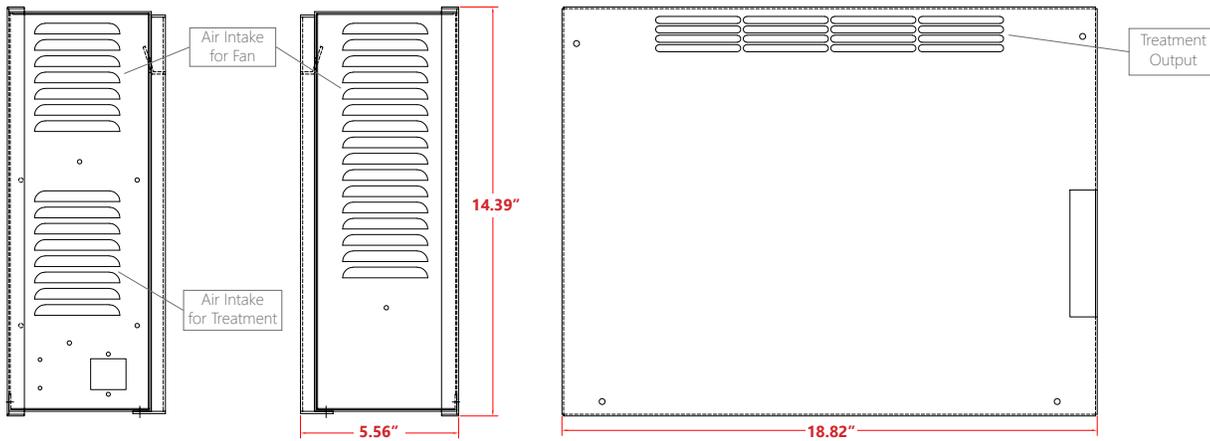

### Operation:

Mount to wall and plug it into a 120V or 230V outlet, depending on model. Set the toggle switch, located on the side of the unit, to the 'on' position to power up the unit. A green indicator light will illuminate to signal the unit is operating and the turbine will start running. Recommended mounting height is 6' minimum, 7' preferred, depending on ceiling height, to the bottom of the unit.

### User Guide

No part of this document may be used for any purpose other than the purposes specifically indicated herein nor may it be reproduced or transmitted in any form or by any means, electronic, or mechanical, including photocopying and/or recording for any purpose without permission from the manufacturer.

This information appearing in this document is for general purposes only. The manufacturer makes no warranty of any kind with regard to the information appearing in this document including, but not limited to, implied warranties of merchantability and/or fitness for particular use or purpose. The manufacturer assumes no responsibility for the results, direct and/or indirect, of any misuse of the information appearing in this document nor for any use of the manufacturer product offering referred to herein in any manner deviating from the recommendations made in this document. The manufacturer assumes no responsibility for the use of any parts, components, or other ancillary appliances including circuitry other than as recommended hereunder or other than that embodied in the product.

### Guidelines For User Safety And Equipment

Protection symbols are used to highlight information relating to the user's personal safety and protection of the equipment throughout this guide. Do not operate the equipment without prior consulting with a representative.

When any of the following symbols appear, the associated information must be read carefully and understood fully. Avoid getting too close to the output of the system. When the equipment is in operation, stay a minimum of 4 feet away from the output.

### Warnings



**WARNING**

The identified danger can cause physical and property damage



**DANGER**

The identified danger can cause severe physical and property damage. This symbol relates specifically to electrical danger.

Under no circumstances will the manufacturer be liable or responsible for any consequential damage that may arise as a result of the installation or use of this equipment. All examples and diagrams shown in this guide are intended to aid understanding. They do not guarantee operation. The manufacturer accepts no responsibility for the actual use of this equipment based on these examples.

Due to the great variety of possible applications for this equipment, the user must assess the suitability of this product for specific applications.

Equipment described herein is recommended based on the room temperature, type of process, the air circulation of the room, and overall size of the room. The user of this product further acknowledges that in order for the equipment to achieve optimal results, there must be sufficient air circulation, a somewhat enclosed treated area, and when applicable, proper ventilation in the packaging of stored/palletized product(s).

